

## SIMPLE DESKTOP SETUP

- 1) Start by opening the zippered portion of the booth.



- 2) Then remove all of the accessories inside.



- 3) Prop open booth by pulling the inside black strap towards you, aligning it with the black rectangles on the sides. This puts the canopy in the proper place for full booth






## VOMO Instructions

### Parts List


- 1 VOMO - Voice Over Mobile Booth
- 1 Script Holder
- 1 Tension Knob
- 1 Large Washer
- 1 Base Plate
- 1 Mic Mount
- 1 Mini-Boom
- 1 Mounting Adapter (For use with travel tripods VOMOTA and VOMOTC)
- 1 LED Clip Light
- 1 Sound Isolation Hood
- 1 Travel Cover (Black)

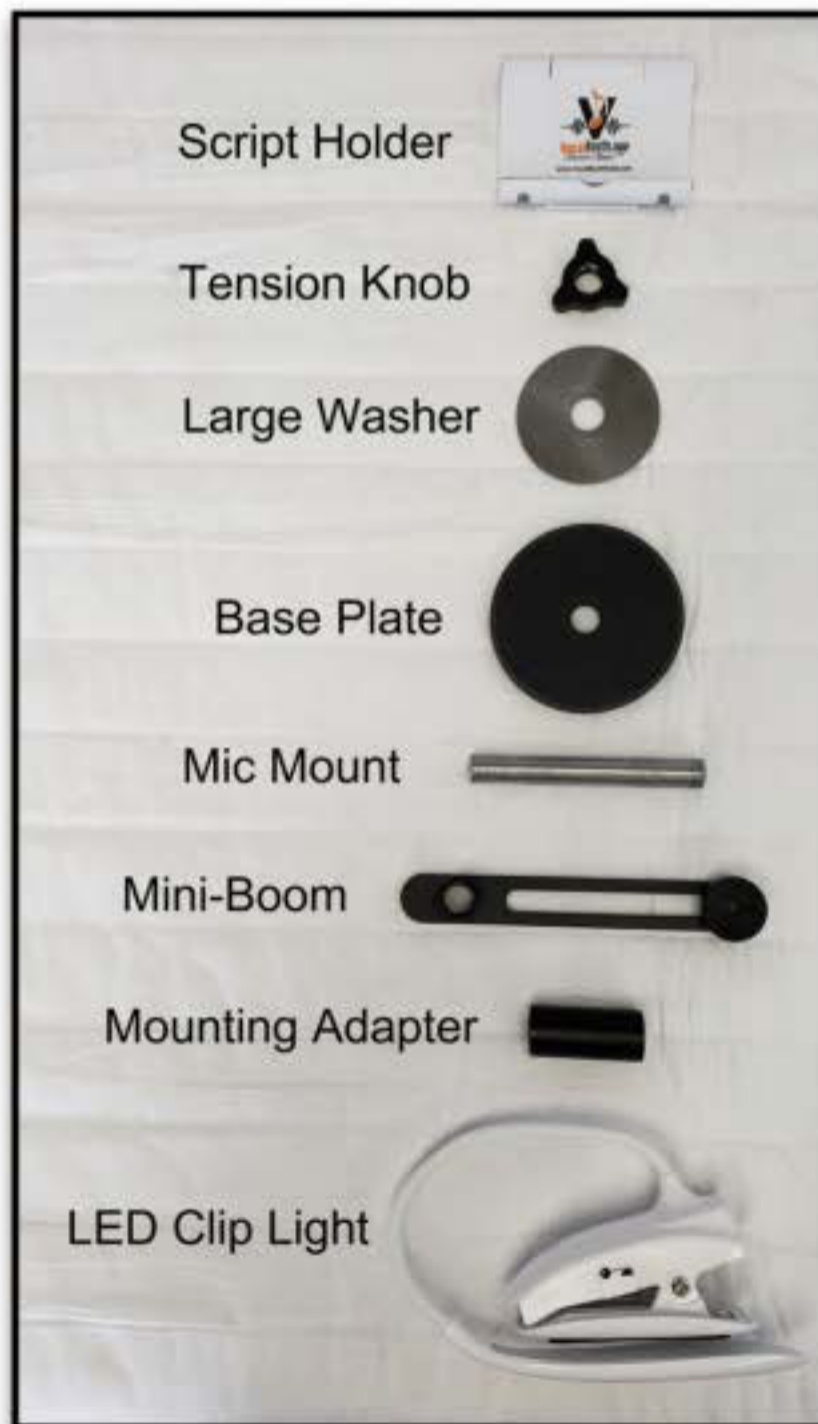

4) Plug in LED Clip light to fully charge with supplied cable. Power switch is located on the side. Turn on the light by touching the icon on the base, one touch is low power, another touch will be mid power and another touch puts it at full power.



5) Grab the Base Plate and the Mic Mount and put them together as shown with rubber side up.

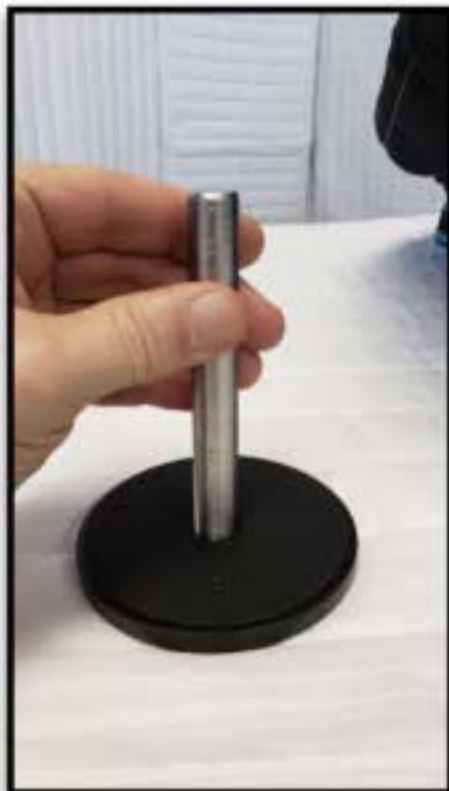



6) Insert mic stand assembly into booth bottom hole, making sure to line up interior holes in the fabric.



7) Add Large Washer and Tension Knob and tighten down well.




8) This is the most simple setup and you are ready to record by installing your mic on the Mic Mount.



9) If you need to add additional acoustic treatment, you can add the Sound Isolation Hood. Make sure the support pole channel is facing down for proper install.



10) On the top of the back of the booth, you will find the quick attachments for the Sound Isolation Hood. The D rings in the Sound Isolation Hood hook up to the two clip connections on both sides.

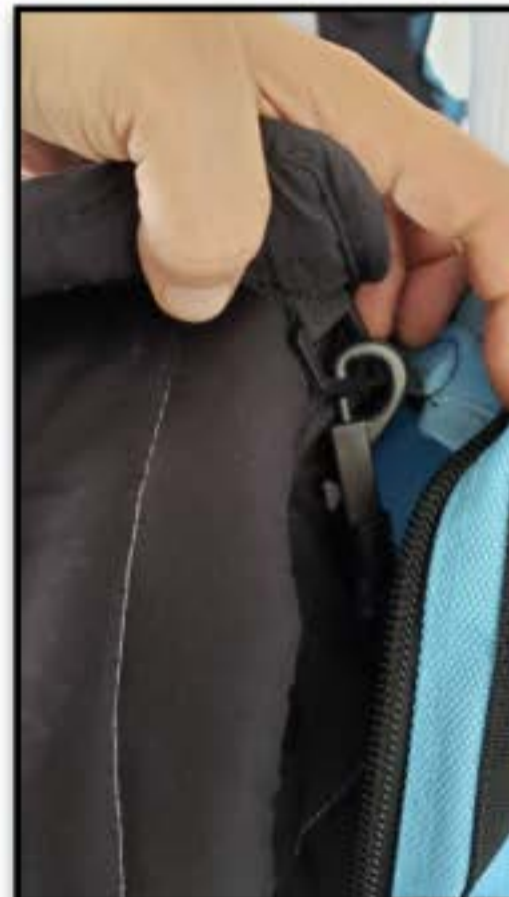





11) You can also fold back the hood to air out the booth or to simply get it out of the way.



12) Adding the Mini-Boom mic mount for advanced setup and best mic positioning.

